

C1P MEMORY MAP W/S-100

STAND ALONE :

0000 - 00FF	PAGE ZERO
0100 - 01FF	STACK
0200 - 0221	BASIC FLAGS & VECTORS
0222 - 023F	UNUSED FLAG & VECTOR AREA
0240 - 1FFF	FREE RAM WORKSPACE
A000 - BFFF	BASIC ROM
D000 - D3FF	VIDEO RAM
DF00	POLLED KEYBOARD
F000 - F001	CASSETTE/RS-232 PORT
	(SWITCH SELECTED 300 OR 4800 BAUD)
F800 - FFFF	MONITOR ROM

S-100 EXPANSIONS

2000 - 7FFF	FREE RAM WORKSPACE
8000 - 9FFF	SYSTEM FUNCTION EPROM
C000 - C003	DISKETTE PIA
C010 - C011	DISKETTE ACIA
C100 - C103	2.4K BPS TAPE PIA
C110 - C111	2.4K BPS TAPE ACIA
D400 - D401	TEXT VIDEO
E000 - EFFF	SYSTEM UTILITIES EPROM
F100 - F1FF	S-100 I/O
(F110 - F111)	(EPROM WRITER)

S-100 EPROM UTILITIES & EDITORS:

9800-9FFF EXTENDED MONITOR

89E0-97FF WP6502 WORD PROCESSOR

E000-E0A0 TEXT VIDEO DRIVER

E0B0-E0D0 RS-232 PORT OUTPUT RATE EXEC

E100-E190 EPROM WRITER

E1A0-E29F RAM TEST UTILITY

E2C0-E37F SYSTEM MENU