

C1p Memory Map W/O S-100 Expansion

0000 – 00FF	Page Zero
0100 – 01FF	Stack
0200 – 0221	Basic Flags & Vectors
0222 – 023F	Available Flag & Vector Space
0240 – 1FFF	Free RAM Workspace
A000 – BFFF	BASIC ROM
D000 – D3FF	Video RAM
DF00	Polled Keyboard
F000 – F001	Cassette / RS232 ACIA
F800 – FFFF	Monitor ROM

C1p Memory Map With S-100 Expansion

2000 – 8FFF	Free RAM Workspace
9000 – 9FFF	Available EPROM Space
C000 – C003	Diskette PIA
C010 – C011	Diskette ACIA
C100 – C103	Digital Tape PIA (No Drivers)
C110 – C111	Digital Tape ACIA (No Drivers)
C200 – C7FF	Unused
C800 – CFFF	EPROM Programing Socket
D000 – D3FF	Video RAM
D400 – D401	Video Card Port
E000 – EFFF	System Utilities EPROM
F100 – F1FF	S-100 I/O
(F110 – F111)	EPROM Programmer

C1p S-100 Utilities

E000 – E0A0	Video Card Text Driver
E0B0 – E0D0	Rs-232 Port Data Rate Selector
E100 – E190	EPROM Programmer Driver
E1A0 – E29F	RAM Test
E2C0 – E39F	System BOOT Menu
E800 – E7FF	Extended Monitor EPROM